



Thank you for choosing Meliconi.

This simplified universal remote control contains all the main functions of most TV remote controls of the brands listed on the back.
Insert the batteries and program your remote control before using it.

Keep your Instructions Booklet for future reference.

USING THE KEYS AND FUNCTIONS

To select the next programme or to turn ON your TV.

Light indicator.

Press them together to turn ON your TV on programme 1.

To select an external terminal.

ON/OFF to turn OFF your TV and, in some cases, to turn ON your TV.

Control the volume using +/-.

Mute key.

To select the previous programme or to turn ON your TV.



FITTING THE BATTERIES

The remote control requires 2 new AAA/LR03 alkaline batteries. Insert the batteries as shown:

- Batteries must be changed once a year.
- Change the batteries if the light indicator starts to flash during use. The batteries are low.
- When removing batteries, insert the new ones within 5 minutes or you may have to reprogram your remote control.
- Make a note of the code for your TV on the adhesive label supplied inside the battery compartment cover. This note will be handy if you have to reprogram your remote control.



SET-UP

Read these instructions carefully before programming your remote control!

To use the remote control with your appliances, you must first program **Speedy Goal** as described below. You can also visit our Internet site www.meliconi.com to have access to interactive instructions for easier and faster remote control programming

PROGRAMMING YOUR REMOTE CONTROL

1. Make sure that the TV is ON.
2. Hold down the **AV** and **X** keys simultaneously until the light indicator at the top starts to flash indicating that the remote control is in programming mode.
3. Press key **P** **4 times** then point the remote control at the appliance. Press and release the **U** key **slowly** several times. STOP when your TV goes OFF.
4. When your TV is OFF, press the **AV** and **X** keys simultaneously. When you release the keys, **three flashes** indicate that the search operation has been completed correctly.
5. **IF YOU DO NOT HAVE THE PROGRAMME SELECTION KEYS ON YOUR ORIGINAL REMOTE CONTROL**
If your remote control does not have the programme selection keys (e.g. **P** / **P**, **+/-**, **CH+/-** etc) once you have programmed Speedy Goal, you can still select the programmes from 0 to 9, as follows:
 - Hold down the **AV** and **X** keys simultaneously until the light indicator starts to flash indicating that the remote control is in programming mode.
 - Release the keys and press **P** **8 times** within 12 seconds. **Three flashes** indicate that the operation has been completed correctly.
 - Make sure you can change programmes from 0 to 9 using the **P** and **P** keys. If not, repeat the search operation, starting from **point 2**.

Additional check

Check that all 7 keys are operating correctly. If the commands work incorrectly or erratically, you have probably entered a code for a similar but different remote control. In this case, repeat the search procedure from **point 2** until all keys respond correctly to the commands sent.

Identify and take note of the TV code which you have searched for, following the code noting procedure (see "PROGRAMMED CODE NOTING" section).

NOTE: DURING THE SEARCH OPERATION, THE LIGHT INDICATOR FLASHES MORE QUICKLY. THE LIGHT INDICATOR STOPS FLASHING AND YOUR REMOTE CONTROL LEAVES PROGRAMMING MODE IN THE FOLLOWING CASES:


- if no keys are pressed for 12 seconds
- if you press keys other than those indicated
- if the code search list is completed. In this case, visit www.meliconi.com or contact the call center.

PROGRAMMED CODE NOTING

When you have programmed Speedy Goal Meliconi, note down the code on the label in the battery compartment cover.

To find the code for your remote control:

1. Hold down the **AV** and **X** keys simultaneously until the light indicator at the top starts to flash indicating that the remote control is searching for the code.
2. Release the keys and, within 12 seconds, press **P** and **P** simultaneously.
3. Release **P** and **P** and pay attention to the flashing of the LED: a long flash corresponds to a + while a short flash corresponds to a - . Note the sequence of the **8 flashes** and note them down on the label in the battery compartment cover, from left to right.

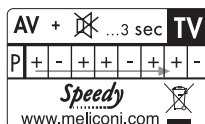

RE-PROGRAMMING YOUR REMOTE CONTROL BY ENTERING THE CODE NOTED DOWN

If the remote control is no longer programmed because it has been left without batteries for a long time or has flat batteries, you can re-program it quickly as follows:

1. Hold down the **AV** and **OK** keys simultaneously until the light indicator at the top starts to flash indicating that the remote control is programming.
2. Release the keys and, within 12 seconds, using the **P** and **P** keys, enter the eight-sign code which you noted down before. At the end, **three flashes** indicate that the code has been saved correctly. If not, try the code entry procedure again from **point 1**.

USING YOUR REMOTE CONTROL

Once you have programmed **Speedy Goal**, you can turn ON your TV in three ways:

- Press **P** or **P**.
- Press **U**.
- Press **P** and **P** simultaneously: this sends the code for **programme 1**.

To return to **programme 1** directly, press **P** and **P** simultaneously.

TROUBLESHOOTING

PROBLEM

The TV does not respond and the light indicator does not light up when you press a key.

The TV or VCR does not respond but the light indicator does light up.

The TV does not respond and the light indicator flashes.

Not all remote control commands are working correctly.

*The **P** and **P** keys do not select the programmes.*

SOLUTION

Check that the batteries are fitted correctly. If necessary, replace them with 2 new 1.5 V AAA/LR03 alkaline batteries.

Check that the batteries are new and that the remote control is pointing at the appliance without any obstacles in the way. If required, reset the remote control code by repeating the programming procedure.

Batteries are low. Replace them.

You may have used the wrong code. Reset the remote control code, following the programming procedure.

The original remote control may not have had this function. In this case, set the code (press **P** **8 times**) as described in the **PROGRAMMING YOUR REMOTE CONTROL** section above.

INFO-LINE

If you have any queries about **Speedy Goal**:

- read this booklet carefully – this will help you to solve almost all problems
- consult our Internet site **www.meliconi.com** to answer all your queries more easily and quickly.

WARRANTY: 2 years

The warranty ceases to be valid if the product is tampered with or used incorrectly.

Remote control model **Speedy Goal**

Purchase date _____

Agent's stamp



This symbol appearing on a product or its packaging indicates that the product must not be considered as normal household waste, but must be taken to a special waste collection centre for recycling electric and electronic appliances. Disposing of this product appropriately helps avoid any potentially negative consequences which could arise from its incorrect disposal. For more detailed information on recycling of this product, contact your local council, the local waste disposal service or the shop where you bought the product.